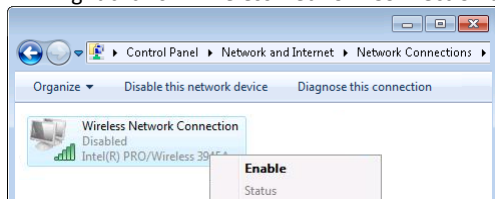## Configure your computer

1. Enable the wireless network connection. Go to **Start** > **Control Panel** > **Network and Internet** > **Network and Sharing Center**. In the left pane click **Change adapter settings** link. Right click on **Wireless Network Connection** and select **Enable.**

2. Setup wireless network adapter on your computer. Right click on **Wireless Network Connection**, choose **Internet Protocol Version 4 (TCP/IP)** and click **Properties.**
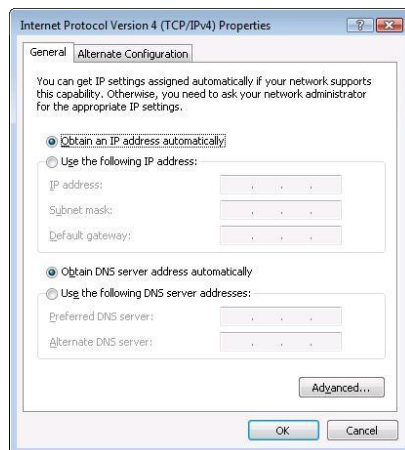
3. Select **Obtain IP address automatically** and **Obtain DNS server address automatically** if they are not selected. Click **OK**.

4. Right click on **Wireless Network Connection** and select **Connect/Disconnect** to see available wireless networks.

5. Choose the wireless network **WRP100_Teltonika** from the list and press **Connect**.

Please visit our web site **www.teltonika.lt** for complete user manual

WRP100 Wireless Repeater

Quick start guide v1.1

ISO 9001
DNV
CERTIFIED ORGANISATION

1. Power up the device
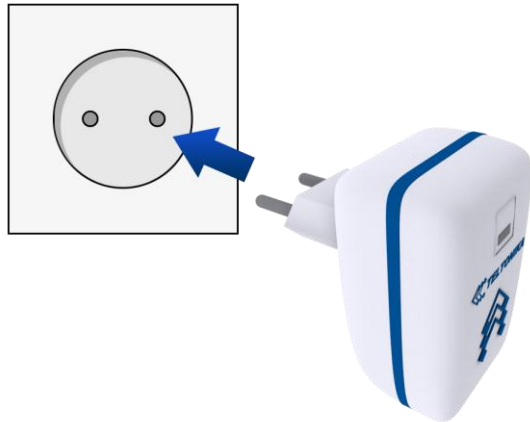
2. Wait for yellow LED to stop blinking

3. Connect to **WRP100_Teltonika** wireless network using your PC, netbook, tablet or smartphone.

4. Open page **http://1.1.1.1** in your browser

5. Select wireless network, enter password (if required) and press **connect**

Name	Security	Signal strength	Password	Action
TeltonikaWifi	WPA1PSKWPA2PSK/TK	96%	*******	connect
Teltonika	NONE	10%		connect

6. Wait for green LED to light up

7. If LED becomes yellow instead of green it means that connection to selected network has failed. Try again starting from step 3 and verify that you are entering correct password.

8. If you want to change the network that is being repeater press and hold the button on the device for 5 seconds. After the LED becomes yellow again start configuration from step 3.